






Installation of this device should be carried out by a qualified installer after reading this manual. Dismantling the casing of the device will automatically void the warranty. Before starting the assembly, make sure that the connecting wires are not live. Conditions of storage, transport and use affect the proper operation of the device.


## Features of the module

- ♦ Dual bistable relay;
- ♦ Cooperation with remote control transmitters of the F&Wave system;
- ♦ The ability to control from up to 8 transmitters;
- ♦ 2 local control inputs - the ability to directly control the relay using any monostable buttons (for example: bell buttons);
- ♦ 2 independently separated output contact NO with load capacity of 16 A (AC-1);
- ♦ Compact enclosure - takes only one field in the switchboard;
- ♦ Retransmission of commands from the transmitter - the ability to increase the range of the remote control;
- ♦ Low power consumption - low operating cost;
- ♦ Built-in electronic thermal protection to prevent damage in case of excessive load of the relay.

## Description of the device

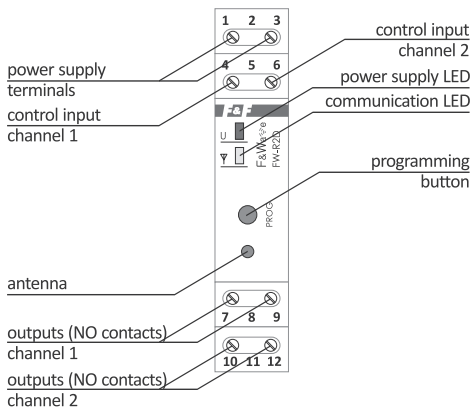

## Wiring diagram

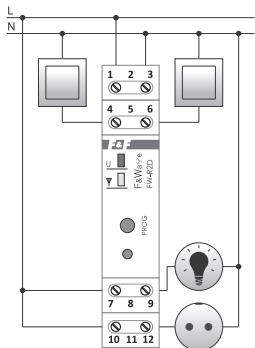

- 1 - L power supply
- 3 - N power supply
- 4 - control input triggered with level L or N - channel 1
- 6 - control input triggered with level L or N - channel 2
- 7/9 - NO contact - channel 1
- 10/12 - NO contact - channel 2



Control inputs do not cooperate with backlit buttons.

## Load capacity

2× 16 A/250 V (AC-1)

The actual maximum load depends on the nature and design of the receiver.


For more information visit: [www.fif.com.pl](http://www.fif.com.pl).

## Pairing



Each channel of the receiver is independently paired.


1

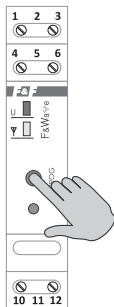

After proper connection, press and hold the PROG button until the circuit of the first channel will switch on and the communication LED will go off.

To select a second channel for pairing, hold the programming button again until the circuit of the second channel switches on.

2

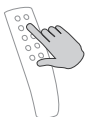

Press the selected button on a remote control or in a flush-mounted transmitter.

3

Correct pairing will be confirmed by temporary switching off of the output circuit and the LED will turn on again.



Each channel of the receiver can be paired with eight different transmitters (remote buttons). Pairing with more buttons will remove the first entries made.

### Unpairing

To clear the list of transmitters cooperating with the receiver, press the PROG button and hold it down for at least 10 seconds. Fast flashing of communication LED will indicate that the memory of the controller has been cleared.

### Local buttons

Short press of a button switches the relay in to the opposite state.

Long press of a button (longer than 5 second) activates the relay regardless of the state, in which the relay was previously in. This feature can be used for synchronizing a group of receivers connected to the same local button. Releasing the button sets the relay in the on position.

### Remote buttons

The FW-RC4, FW-RC10 transmitters operate on the principle of a bistable switch: one press of a button activates the relay; the second press of button deactivates the relay. The FW-RC5 transmitter also has separate inputs ON (always ON) and OFF (always OFF).



Due to the nature of transmission and retransmission do not use the same button in transmitter more often than every 2 seconds. Switching of the receiver may be carried out with a short delay.



We do not recommend the use of remote bistable transmitters to control a group of receivers due to the possibility of desynchronization of the activation state (especially when operating on larger distances and/or simultaneous use of local buttons on the receivers).



Activation of the thermal protection is indicated by a steady pulsing of communication LED, switching off of the output circuit and the lack of its reactivation possibility. After lowering the temperature to a safe value the output circuit will remain switched off until restarted.

## Devices of the F&Wave system

### Battery transmitters

Type	Product
Flood sensor	FW-FS1
Remote control	FW-KEY, FW-RC4, FW-RC10
Wall button	FW-WS1, FW-WS2, FW-WS3
	FW-WSO1, FW-WSO2, FW-WSO4
Flush-mounted box $\varnothing 60$	FW-RC5

### AC transmitters

Type	Product
Flush-mounted box $\varnothing 60$	FW-GS1, FW-GS2, FW-GS4
	FW-RC4-AC

## Devices of the F&Wave system cont.

Receivers		
Function	Flush-mounted box ø60	DIN rail
Correct operation of LED light bulbs with devices of the FW-...-NN series	FW-BYPASS-NN	---
Universal dimmer	FW-D1P	FW-D1D
2-channel LED controller	FW-LED2P	FW-LED2D
Single relay	FW-R1P	FW-R1D
Single multifunction relay	FW-R1P-P, FW-R1-P-NN	FW-R1D-P
Double relay	FW-R2P	FW-R2D
Double multifunction relay	FW-R2P-P, FW-R2P-NN	FW-R2D-P
Roller blind controller	FW-STR1P	FW-STR1D
Roller blind multifunction controller	FW-STR1P-P	FW-STR1D-P

### Technical data

power supply	85÷265 V AC/DC
control input	85÷265 V AC/DC; <1 mA
power consumption	
operating mode	1.00 W
standby	0.25 W
output load capacity (AC-1)	2× 16 A/250 V
radio frequency	868 MHz
maximum emitted frequency power	10 mW
working temperature	-25÷65°C
terminal	2.5 mm <sup>2</sup> screw terminals
tightening torque (max)	0.4 Nm
mounting	on TH-35 rail
dimensions	1 module (18 mm)
ingress protection	IP20

## Warranty

F&F products are covered by a 24 month warranty from the date of purchase. The warranty is effective only with a proof of purchase. Contact your dealer or directly with us.

## CE declaration

F&F Filipowski L.P. declares that the device is in conformity with the essential requirements of Directive 2014/53/EU of the European Parliament and of the Council of 16 April 2014 on the harmonisation of the laws of the Member States relating to the making available on the market of radio equipment and repealing Directive 1999/5/EC. The CE Declaration of Conformity, along with the references to the standards in relation to which conformity is declared, can be found at [www.fif.com.pl](http://www.fif.com.pl) on the product page.

## Compliance with the standards

PN-EN 55024:2011  
PN-EN 60669-1:2006  
PN-EN 60669-2-2:2008  
PN-EN 62368-1:2015-03  
PN-ETSI EN 300 220-1 V3.1.1:2017-08  
PN-ETSI EN 300 220-2 V3.1.1:2017-08  
PN-ETSI EN 301 489-1 V2.1.1:2017-08  
PN-ETSI EN 301 489-3 V1.6.1:2014-03